



GameStop Universal System Selector Button Replacement

This guide will walk the reader through the replacement of a system selection button for an GameStop Universal System Selector.

Written By: Jared





TOOLS:

 
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [Gamestop Universal System Selector System ButtonA](#) (1)

Step 1 — Button

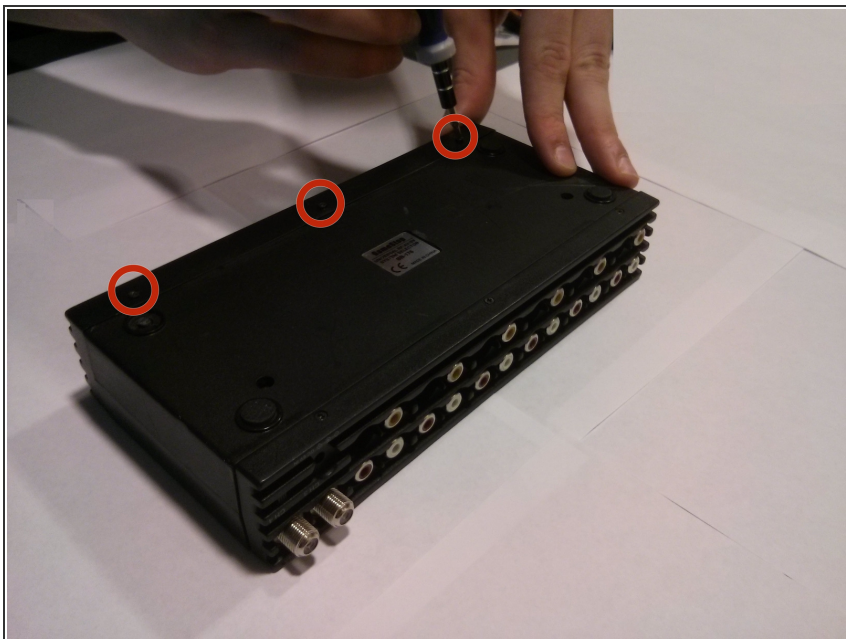



- ⚠ Disconnect the DC 6V IN power cable from the device.
- Remove the 3 front panel screws on the bottom of the device.

Step 2



- Carefully pry off the front panel of the device to reveal the button in need of replacement.

  Step 3

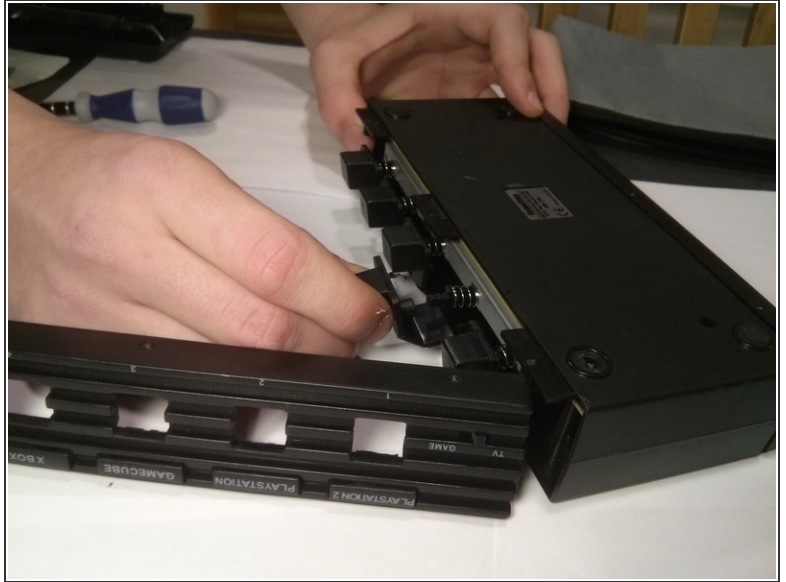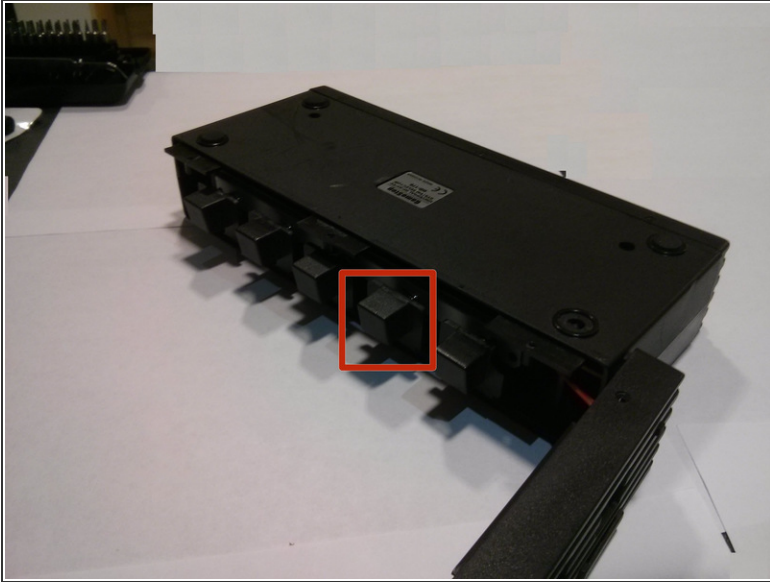


- Pull firmly on the button in need of replacement to free it from its housing.

Step 4



- Push the replacement button into its new housing.

 Step 5

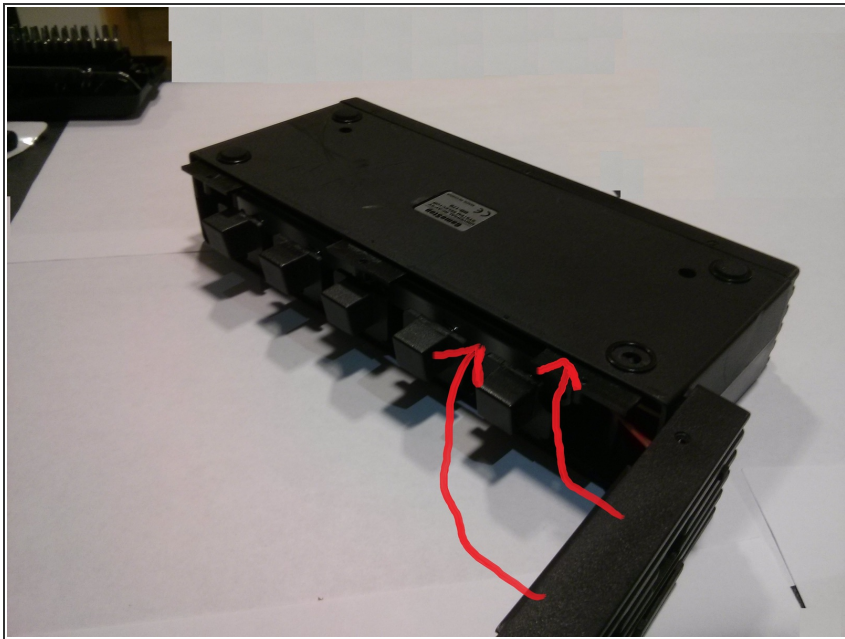

- Snap the front panel back into place and re-insert the 3 front panel screws, completing the replacement.

The system selector button should now be working properly.

This document was last generated on 2017-07-13 02:52:41 AM.